



WEEE Number: 80133970

## MINI PORTABLE SPEAKER

Multi-language  
Manual QR CODE**1**  
YEAR  
WARRANTY

## INTRODUCTION &amp; WARRANTY

Thank you for selecting and buying V-TAC Product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any other query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 1 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product.

## Instructions for use

Please read all instructions carefully

## Getting started

Remove the speaker from the box  
Remove any packaging from the product  
Place the packaging inside the box and store for safekeeping

## In the box

Metal speaker  
2 in 1 of USB charging & LINE IN cable  
Instruction Manual


## Features

- Enjoy music wirelessly.
- Bluetooth wireless streaming
- Built-in rechargeable battery.
- Support TF card play music

## Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.
- Do not use abrasive cleaning solvents to clean.
- To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity.
- Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire etc.
- Never immerse the unit in water or any other liquid for cleaning purposes.

## Product Diagram

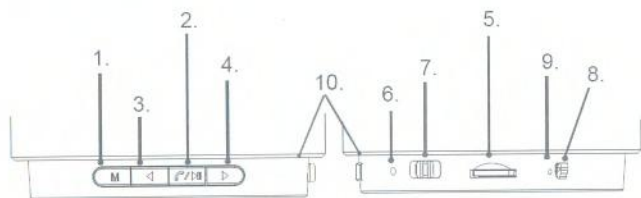

1	Mode Switch button	To switch Bluetooth / Radio / TF card / LINE IN mode
2	Answer / end a call / Play / Pause / FM stations	Once call coming, long press the button to refused the call. A short press the button to play / pause / answer / end calls. Press the button twice to redial the last call. Long press the button, it can scan all FM stations.
3	Previous track / Volume down	Short press this button to switch to the previous song Long press this button to decrease the volume
4	Next track / Volume Up	Short press this button to switch to the next track Long press this button to increase the volume
5	TF card slot	TF card play music (MAX.16G)
6	MIC	Microphone
7	Power switch ON/ OFF	Push the button to turn ON / OFF
8	Charging port /LINE IN	USB charging port /LINE IN play music
9	Charging LED indicator	Charging LED indicator
10	LED light	Blue LED light

## INSTRUCTION FOR USE

## Charging Instructions:

The speaker comes with a built in rechargeable battery. Before using it for the first time it is recommended you charge the battery fully. The device can also be used whilst powered and is charging.

Connect the USB charger cable to computer USB port or a USB wall charger (not included).

Connect the other side to the USB charging slot of the Speaker, the battery charging LED indicator will be light red.

When the battery is fully charged, the LED indicator will switch off.

When the battery is running low, a tone will be emitted to indicate the battery needs charging.

## Pairing the speaker with Bluetooth devices (phone or music device)

Push the Power switch button to "ON".

The Bluetooth mode will open automatically.

The LED indicator light will flash Blue.

Place the speaker and Bluetooth device (phone or music device) no further than 20 feet apart; Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device. Once you have activated Bluetooth on your device, select the pairing name "SKU-7712" or "SKU-7713" or "SKU-7714" or "SKU-7715" from the list of available Bluetooth devices. If required, enter the password '0000' to confirm to pairing. Once paired successfully, you will hear a tone indicating pairing successful. You can now start to use the speaker.

Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices

The speaker will attempt to automatically connect to the last device it was paired with when Bluetooth mode turn on. If you want to pair it with a new device, please turn OFF your last Bluetooth device (phone or music device) then use your new device to search and select the pairing name.

Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your device's user manual for further information.

**Function Summary****Listening to Music**

Once the speakers are paired with your device you can stream music wirelessly through the speaker. Select the track music what you wish to listen on your phone and it will be streamed to your Bluetooth speaker. Should you encounter any problems while streaming please refer your device's user manual for further information. Control the volume of your speaker using the control on your phone or device.

**Using the FM radio**

Turn on the unit, and press the Mode button to select the FM radio mode. Must be inserted the charging cable as an antenna.

- 1) A long press on the Play/Pause button, FM radio will automatic searching and can automatically save;
- 2) A short press on the Volume up & Volume down button to select the desired radio station.

**TF card playback**

After the metal speaker is turned on, insert the TF card to the card slot, it will switch to micro SD card mode and start playing the music, the Bluetooth mode will be disconnected. Long press the volume to adjust the volume level, short press the volume to adjust the previous track and next track.

**Using LINE IN**

After the metal speaker is turned on, connect one end of the micro usb cable (included) into charging port /LINE IN jack, the other end of the 3.5mm LINE IN Cable to connect MP3 / Smartphone, press the Mode button to select the LINE IN mode to play music.

**Cleaning & Maintenance**

Turn OFF the speaker if it is left unattended and before cleaning. NEVER immerse the speaker into water and please use a dry cloth for cleaning.

**Storage**

Turn off the power when you not in use, clean and store safety.

**Do's and Don'ts**

Read the following recommendations before using the speaker. Following these you will be able to enjoy the product for many years.

- Avoid direct spray of liquids. Do not immerse in any liquids.
- Don't use abrasive cleaning solvents to clean the speaker.
- Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, distort certain plastic parts.
- Don't dispose of the speaker in a fire as it will result in an explosion.
- Don't expose the speaker to contact with sharp objects as this will cause scratches and damage.
- Don't let the speaker drop on to the floor. The internal circuitry might get damaged.
- Don't attempt to disassemble the speaker as it may get damaged if you are not professional.
- Do not expose the speakers to heat or fire. Avoid storage in direct sunlight.
- Do not subject the speakers to mechanical shock.
- Do not add any fluids or solids to your speaker.
- Do not use the product if it has been damaged in any way.

**Specifications**

Bluetooth specification	Bluetooth 4.1
Operating distance	10 meters (max.)
Frequency response	100Hz-15KHz
Speaker power	1 x 3W
Built-in battery	3.7V / 400mAh
Charging input voltage	DC 5V $\square$ 500mA
Charging time	About 2.5 hours
Working time	About 1.5 hours
Product size	7x7x4.2CM

Note: Battery life & charging time may vary based on usage & types of devices used.



is a trademark on a registered trademark of  
Bluetooth SIG Inc.

Guidelines for protection of the environment



This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances. This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Made in China

